

## Exinda 6062 – Quick Start Guide

### Review Contents

- 1 x Exinda Appliance
- 2 x Power leads
- 1 x UTP Straight cable (BLUE)
- 1 x UTP Crossover cable (RED)
- 1 x Serial cable
- 1 x Quick Start Guide

### Information required for configuration

- Speed/Duplex of Network Interface Cards (NICs)
- Email Address

### Step One – Physical Installation



1. With the appliance powered OFF, install a crossover cable (red) between Exinda's WAN port and the Router/Firewall.
2. Install a straight through cable (blue) between Exinda's LAN port and the LAN switch.
3. Ensure that there is still connectivity through the appliance. This will ensure that the Ethernet bypass is working.
4. Install a straight through cable (blue) between Exinda's management port (Gb1) and the LAN switch.
5. Plug in the power cord.
6. Switch on the appliance and ensure that the NIC lights flash and traffic is passing through.

### Step Two – Jump Start from the Web User Interface

1. The Exinda appliance by default will pick up an IP address from DHCP. The IP address is available on the management interface.  
**Note:** If a DHCP address is not picked up, the Exinda will default to the IP address 172.14.57. Open a web browser and connect to the Web User Interface by typing <https://172.14.1.57> in the address field. You must configure the IP address of your computer to the same subnet as the Exinda appliance – e.g. set your IP address to 172.14.1.58, netmask 255.255.255.0
2. From a web browser go to the following website: [www.findmyexinda.com](http://www.findmyexinda.com). This will download an applet and automatically find the recently installed Exinda appliance.  
**Note:** [www.findmyexinda.com](http://www.findmyexinda.com) utilizes a multicast packet to find local Exinda appliances. Therefore, you need to be on the same physical local LAN for this to work.
3. Click on the Exinda appliance that has been found.
4. Login with username=admin and password=exinda.
5. Read and accept the EULA.
6. The system automatically starts the Configuration Wizard. Complete all steps.
7. Click 'Save' in the status bar. Click 'advanced mode' in the title area. You are done.

### Or from the Serial Console / Command Line Interface

1. To access the Exinda appliance via serial console, use your preferred terminal software (e.g. HyperTerm) with the following settings: **Bits per second=9600, Bits=8, Parity=None, Stop bits=1, Flow Control=Hardware.**
2. Login with username=admin and password=exinda.
3. Read and accept the EULA.
4. The configuration Jump Start automatically starts. Complete all steps.
5. Save and you're done.

For further support, visit [www.exinda.com/support](http://www.exinda.com/support)